

INSTALLATION INSTRUCTION

Duet Button Lights (1800K-4000K)

HR2R-DU-A, HR2S-DU-A

WAC®

WARNING

IMPORTANT: NEVER attempt to do any work without shutting off the electricity.

1. Read all instructions before installing.
2. System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
3. Place the wall switch in the "OFF" position.
4. Go to the main fuse box, or circuit breaker. Unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the space that you are working on.

CAUTION

- All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction may invalidate the UL/cUL listing of this fixture.

AVERTISSEMENT

IMPORTANT : Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Placez l'interrupteur mural en position d'arrêt (« OFF »).
- Toujours mettre le fusible ou le disjoncteur en position arrêt dans la pièce ou des travaux électriques sont prévus

MISE EN GARDE

 
- Toutes les pièces doivent être utilisées tel qu'il est indiqué dans ces instructions. Ne remplacez pas les pièces, n'en laissez pas de côté et ne les utilisez pas si elles sont usées ou brisées. Le non-respect de ces instructions peut annuler l'homologation UL/cUL du luminaire.

INSTALLATION

A) Recessed Mounting

NOTE: The surface mounting bracket is not needed for recessed mounting and may be discarded.

1. Cut a 2 1/8" diameter hole in the surface.
2. Feed the fixture wires through the hole, and connect the wires to compatible WAC power supply (order separately).
3. Compress the springs on either side of the cover piece and insert it into the opening.
4. Fit the light fixture into the hole. Light fixture is held in place by the springs.

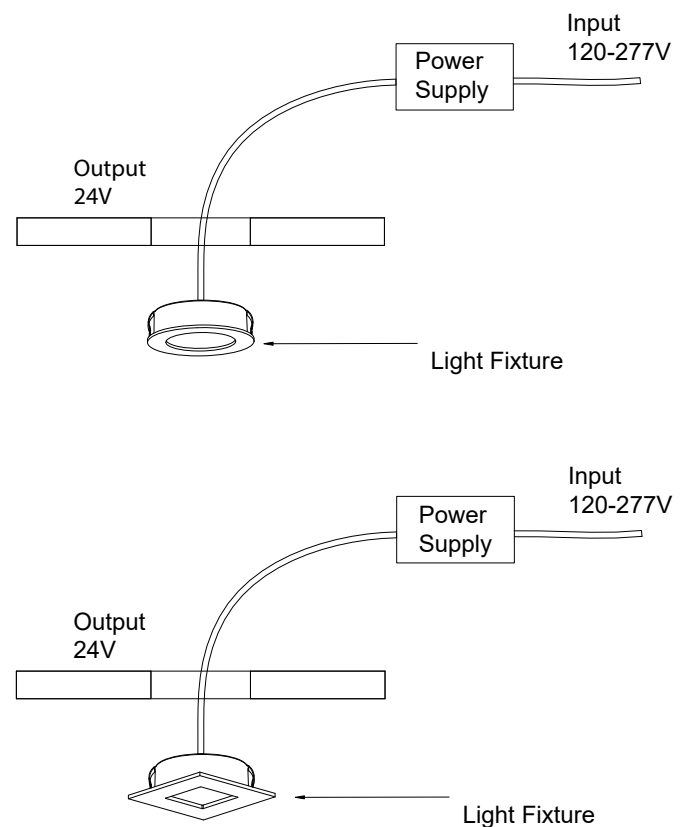

wacighting.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters, East Manufacturing Facility
44 Harbor Park Drive
Port Washington, NY 11050

South East Manufacturing Facility
1600 Distribution Ct
Lithia Springs, GA 30122

Central Manufacturing Facility
1700 South J Elmer Freeway, Ste 100
Cedar Hill, TX 75104

West Manufacturing Facility
1750 S Archibald Ave
Ontario, CA 91761


INSTALLATION INSTRUCTION

Duet Button Lights (1800K-4000K)

HR2R-DU-A, HR2S-DU-A



 B) Surface Mounting

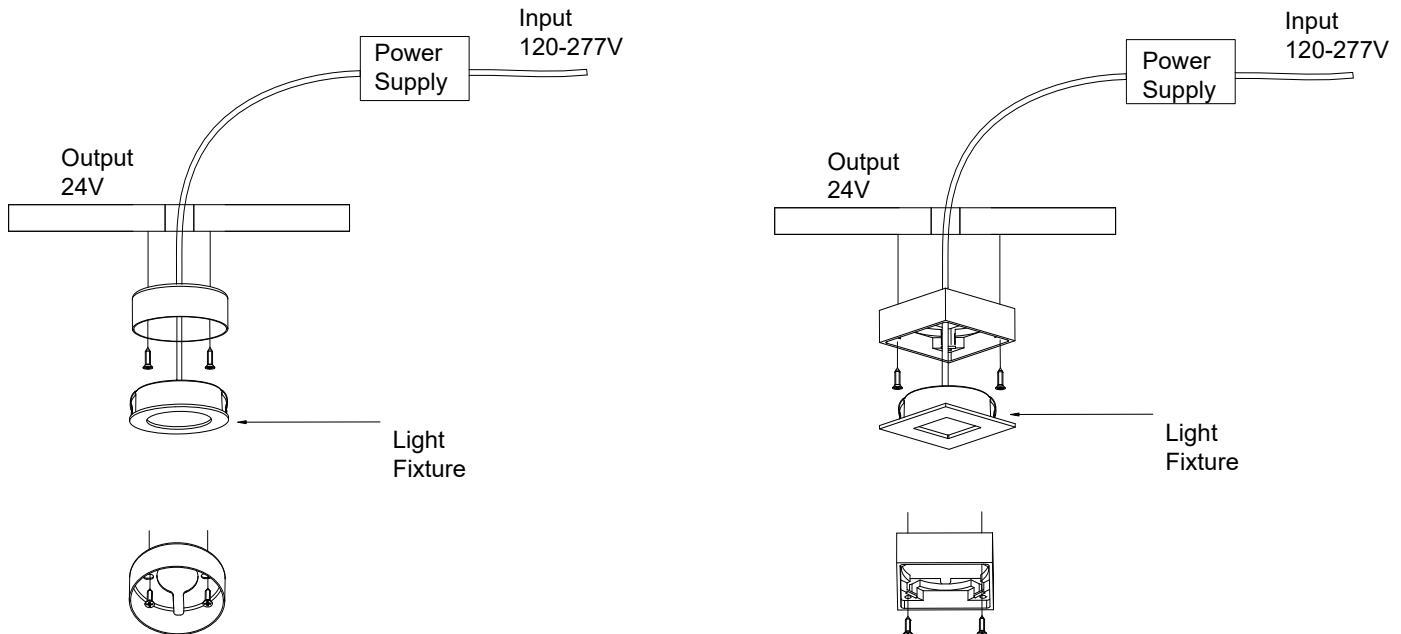

1. Wires may be run behind the fixture or along the mounting surface. Determine the most convenient location for wire passage.
2. Screw the surface mounting bracket to the surface with screws provided. Ensure that the screw's heads level with bracket.
3. To wire behind the fixture, drill a hole in the surface sufficient to allow the socket wires through.
4. Feed the fixture wires through the hole, and connect the wires to a compatible WAC power supply (order separately).
5. Snap the light fixture onto back plate. Light fixture is held in place by the springs.

POWER SUPPLIES:

Use to power the HR2R-DU-A, HR2S-DU-A button light. Below is a list of compatible power supply models and descriptions (sold separately)

Model	Description	Type	Dimming
PS-24DC-U60R-CS-DU	CCT SELECT 120-277V 60W 24VDC	Remote Power Supply	TRIAC/ELV/0-10V
PS-24DC-U96R-CS-DU	CCT SELECT 120-277V 96W 24VDC	Remote Power Supply	TRIAC/ELV/0-10V
PS-24DC-U288R-CSDU	CCT SELECT 120-277V 288W 24VDC	Remote Power Supply	TRIAC/ELV/0-10V
PS-24DC-60P-DU	CCT SELECT 120V 60W 24VDC	Portable Power Supply	No Dimming
PS-24DC-96P-DU	CCT SELECT 120V 96W 24VDC	Portable Power Supply	No Dimming
PS-24DC-96R-TW-DU	WAC MESH PSC 120-277V 96W 24VDC	Remote Power Supply	Through WallStation, MyWAC App
PS-24DC-288R-TW-DU	WAC MESH PSC 120-277V 3 X 96W 24VDC	Remote Power Supply	Through WallStation, MyWAC App

wacighting.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters, East Manufacturing Facility
44 Harbor Park Drive
Port Washington, NY 11050

South East Manufacturing Facility
1600 Distribution Ct
Lithia Springs, GA 30122

Central Manufacturing Facility
1700 South J Elmer Freeway, Ste 100
Cedar Hill, TX 75104

West Manufacturing Facility
1750 S Archibald Ave
Ontario, CA 91761