

# INSTALLATION INSTRUCTION

## Volta 4.5" Tunable White - Adjustable Square Trim

R4SAT, R4SAL

WAC®

### SAFETY INSTRUCTION

IMPORTANT: Never attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.


### AVERTISSEMENT

IMPORTANT: Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

### CAUTION:

Refer to specification sheets for compatible housing and trim details. Follow appropriate housing instructions to begin installation.

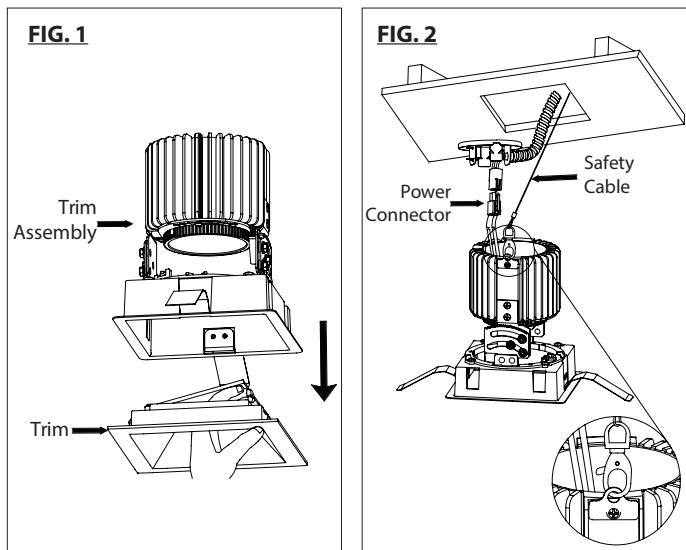


### TRIM MODEL

Refer to specification sheets for compatible housing and trim details. Follow appropriate housing instructions to begin installation.

### TRIM INSTALLATION

**Note:** Before installation, make sure the trim assembly is in vertical straight position.

1. Remove trim from trim assembly (See **FIG. 1**).
2. Raise trim assembly to ceiling cutout and connect power connector and safety cable (See **FIG. 2**).
3. Install connector cap onto top of trim assembly, careful not to pinch power wiring. Make sure the cap wire cable aligns with the notch on the top of heat sink (See **FIG. 3**).

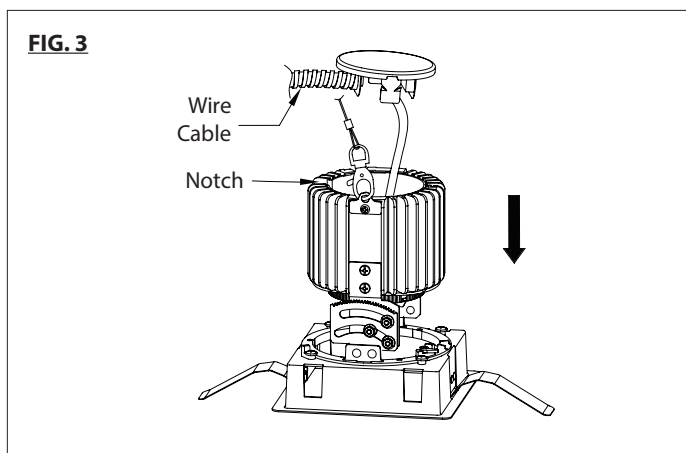

wacighting.com  
Phone (800) 526.2588  
Fax (800) 526.2585

Headquarters, East Manufacturing Facility  
44 Harbor Park Drive  
Port Washington, NY 11050

South East Manufacturing Facility  
1600 Distribution Ct  
Lithia Springs, GA 30122

Central Manufacturing Facility  
1700 South J Elmer Freeway, Ste 100  
Cedar Hill, TX 75104

West Manufacturing Facility  
1750 S Archibald Ave  
Ontario, CA 91761


## INSTALLATION INSTRUCTION

### Volta 4.5" Tunable White - Adjustable Square Trim


R4SAT, R4SAL

WAC®


**FIG. 4**

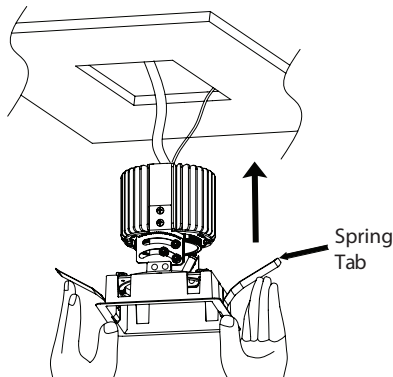


**FIG. 5**

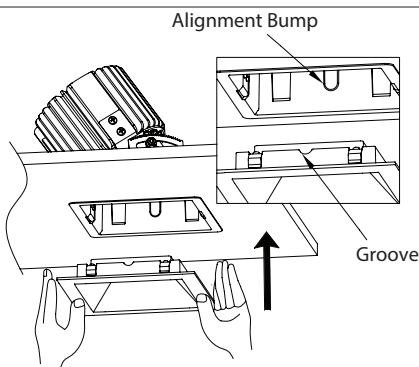

**FIG. 6**

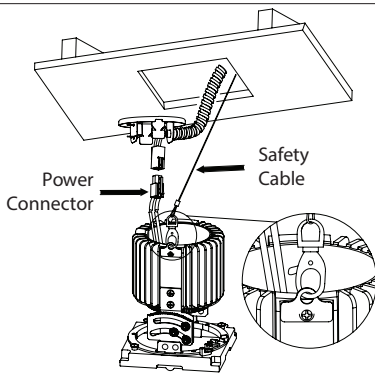

**FIG. 7**

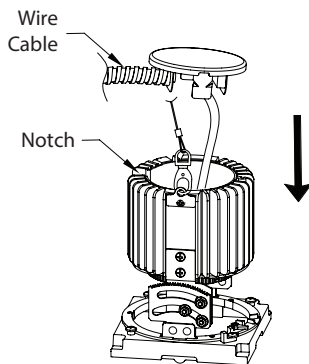

4. Fold trim assembly mounting springs inward and insert trim assembly into ceiling cutout. Be sure once installed, trim assembly is flush and secure (See **FIG. 4**).
5. Before inserting trim inside the trim assembly, the trim assembly needs to be adjusted to the desired position horizontally and vertically. See the following section of optional adjustment features for the details.
6. After finishing the adjustment, raise trim up to the trim assembly until the trim is flush with ceiling surface. Be sure the groove on trim aligns with the alignment bump on trim assembly (See **FIG. 5**).

#### Trimless INSTALLATION

**Note:** Before installation, make sure the trim assembly is in vertical straight position.

1. Raise trim assembly to ceiling cutout and connect power connector and safety cable (See **FIG. 6**).
2. Install connector cap onto top of trim assembly, careful not to pinch power wiring. Make sure the cap wire cable aligns with the notch on the top of heat sink (See **FIG. 7**).


## INSTALLATION INSTRUCTION

### Volta 4.5" Tunable White - Adjustable Square Trim


R4SAT, R4SAL

WAC®


**FIG. 8**

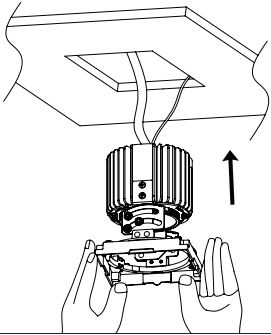


**FIG. 9**

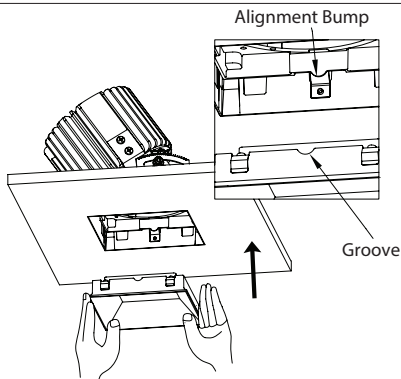

**FIG. 10**

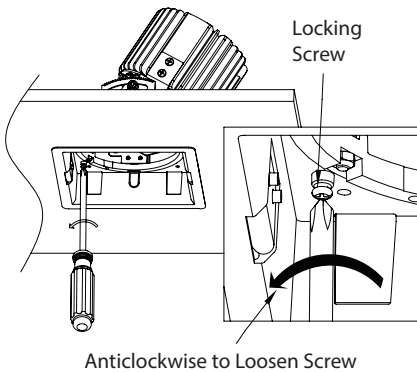

**FIG. 11**

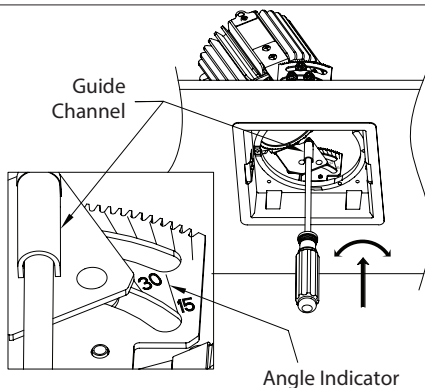

3. After power and safety chain connections, insert trim assembly into spackle frame (See **FIG. 8**).
4. Before inserting trim inside the trim assembly, the trim assembly needs to be adjusted to the desired position horizontally and vertically. See the following section of optional adjustment features for the details.
5. After finishing the adjustment, raise trim up to the trim assembly until the trim is flush with ceiling surface. Be sure the groove on trim aligns with the alignment bump on trim assembly (See **FIG. 8 & 9**).

#### OPTIONAL ADJUSTMENT FEATURES

The adjustable trims can be adjusted to aim the light beam to accent objects, walls, etc. This action needs to be done before the trim is installed.

##### 1. Horizontal (Rotational) Adjustment.

The trim assembly is capable of being horizontally rotated up to 365 degrees, and can be locked in place once the adjustment is done.

- a. Use the Philips-head screw driver to loosen the locking screw by turning anti-clockwise in order to rotate the trim assembly freely to aim the beam of light horizontally (See **FIG. 10**).
- b. After adjusting the trim assembly to the desired position, lock it in place by turning the locking screw clockwise to end.

##### 2. Vertical (Angular) Adjustment.

The trim assembly is capable of being vertically adjusted between 0-45 degrees, and can be self-locked in place once the adjustment is done.

- a. Insert the Philips-head screw driver into the guide channel.
- b. Gently push up screw driver to release spring latch. While holding latch up, tilt screw driver handle until the desired angle is achieved. The angle indicator is marked with lines in 5° increments to assist with positioning (See **FIG. 11**).


# INSTALLATION INSTRUCTION

## Volta 4.5" Tunable White - Adjustable Square Trim


R4SAT, R4SAL

WAC®


**FIG. 12**

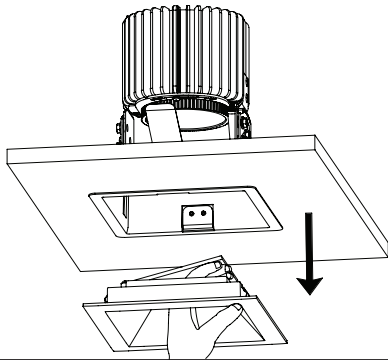


**FIG. 13**

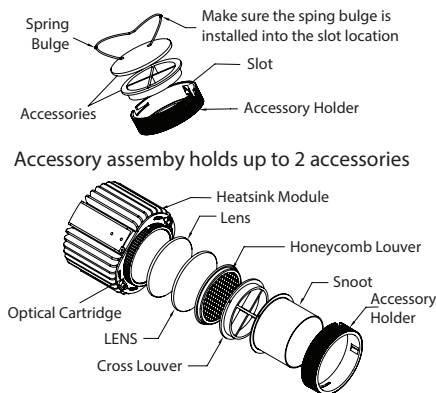

**FIG. 14**

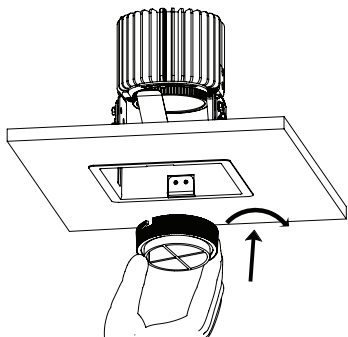

**FIG. 15**

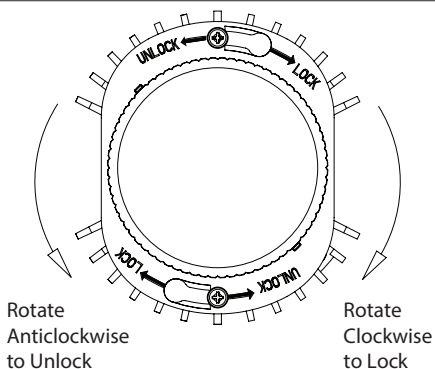

**Note:** The adjustable trims have the Hot-Aiming feature for both horizontal rotation and vertical adjusting.

### ACCESSORY INSTALLATION

1. Power off the fixture and let fixture cool down.
2. Remove trim from trim assembly (See **FIG. 12**).
3. Adjust the trim assembly to the vertical straight position.
4. Prepare accessory holder with appropriate accessory (See **FIG. 13**).
5. Raise the accessory assembly up into the trim opening, engage the accessory holder at white tabs of optical cartridge and turn clockwise to lock (See **FIG. 14**).
6. Put back the trim assembly to the desired position. Reinstall trim up to trim assembly until trim is flush with ceiling surface. Be sure the groove on trim aligns with the alignment bump on trim assembly (See **FIG. 5**).

### REFLECTOR REPLACEMENT

1. Power off fixture and let fixture cool down.
2. Exchange reflector
  - a. Remove the trim from the trim assembly (See **FIG. 12**).
  - b. Adjust the trim assembly to the vertical straight position.
  - c. Insert hand into fixture opening to grip optical cartridge, rotate to unlock and take out (See **FIG. 15**).
  - d. Insert the replacement reflector into optical cartridge, put the whole assembly back inside fixture and lock it to the heat sink.
  - e. Put back the trim assembly to the original position. Reinstall trim inside fixture to complete (See **FIG. 4 & 5**).


## INSTALLATION INSTRUCTION

### Volta 4.5" Tunable White - Adjustable Square Trim


R4SAT, R4SAL

WAC®

**FIG. 16**

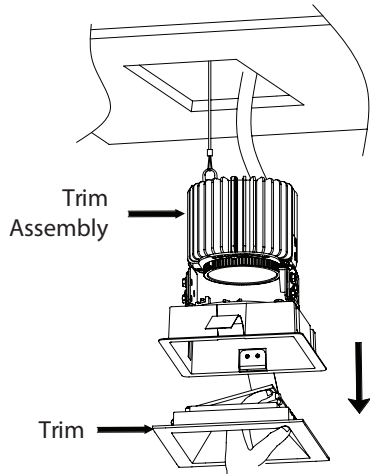

**FIG. 17**

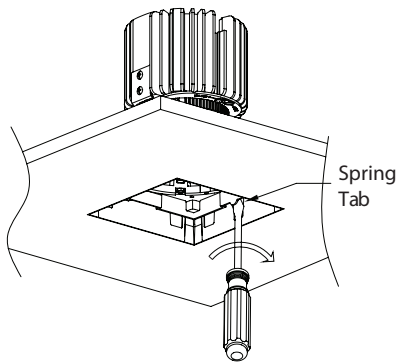

3. If removal of trim assembly is desired
  - a. Remove trim from the trim assembly first, then adjust the trim assembly to the vertical straight position and take out the trim assembly from the ceiling or the fixture aperture (See **Fig. 16**).
  - b. To remove the Trimless assembly, use the flat head screw driver to release the spring tab on aperture ring (See **FIG. 17**).