

INSTALLATION INSTRUCTION

Angled Recessed Channel

LED-T-CH6

WAC

SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.


- Read all instructions before installing.
- Always turn off power at fuse box prior to installation to prevent electrical shock.
- Intended for indoor use. Dry and damp locations.
- For installation by a qualified electrician.
- System is intended for installation in accordance with National Electric Code, and local regulations.
- Consult with local inspector to assure compliance.

Instruction de sécurité

IMPORTANT: NE JAMAIS tenter tout travail sans couper l'électricité.


- Lisez toutes les instructions avant d'installer.
- Toujours couper l'alimentation électrique à la boîte à fusibles avant l'installation pour éviter les chocs électriques.
- Destiné à une utilisation en intérieur. endroits secs et humides.
- Pour l'installation par un électricien qualifié.
- Le système est destiné à être installé conformément au Code national de l'électricité, et les réglementations locales.
- Consultez l'inspecteur local pour assurer la conformité.

COMPONENTS:

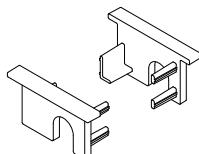

LED-T-CH6-EC (2)

The instructions apply to the model(s) below:

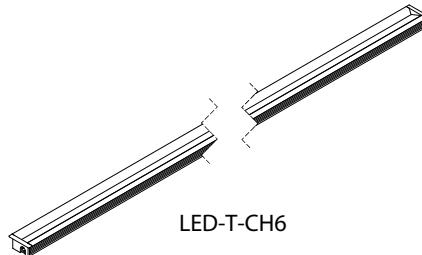

STEP 1: Remove the diffuser from the channels by hand.



STEP 2: Cut a slot measuring 13/16" wide by 1/2" deep into the mounting surface (See FIG. 1).

STEP 3: If the remaining material is thick enough, use the included self-tapping mounting screws to mount the channel directly into the slot. Otherwise, use the appropriate adhesive for the mounting surface material.

STEP 4: Peel off the protective film on the back of the adhesive of the tape light and gently stick the tape inside the channel by hand. Make sure the tape connector is kept inside the endcaps of the channels.

STEP 5: Power and test the tape light.

STEP 6: Gently snap the diffuser back into the channel by hand.

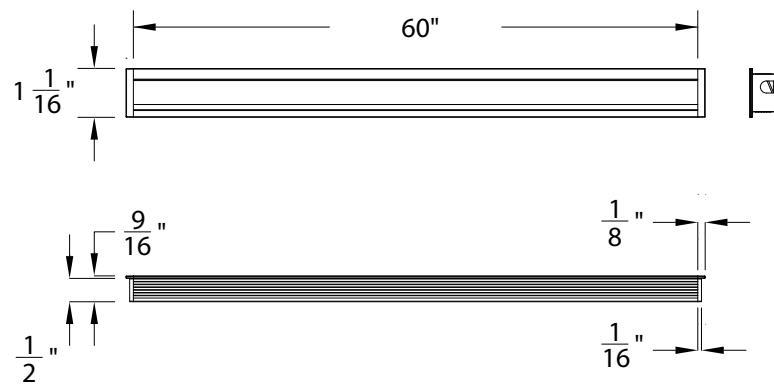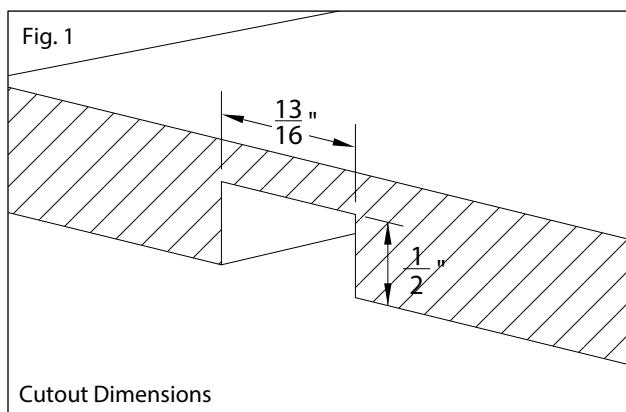

waclighting.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters/Eastern Factory
44 Harbor Park Drive
Port Washington, NY 11050

Central Factory
1600 Distribution Ct
Lithia Springs, GA 30122

Western Factory
1750 Archibald Avenue
Ontario, CA 91760